

CENT New Sample List

1 New Samples Screen

By default this screen is displayed once the user logs in. This screen displays the last samples received from the lab which belong to the current customer. Different options are available in this screen which are the following:

- 1- The list can be filter based on their status, e.g., the user can display only those samples which are in Action Status - red color, or any other status or display them all.
- 2- The list can be sorted based on different references, e.g., Lab code; Registration code; CENT code; and Alert code
- 3- If the user wants to remove one sample or more from the New Samples List, then he should click on the check box(s) beside those samples (3.a) and then click the button at the top labeled “Hide Sample From New Sample List” (3.b).Hiding a sample from the list does not mean it is removed from the system , It only means it will not be visible in the recent samples list but it will be available in the sampling history of the equipment
- 4- To display the details of one of the sample, the user can click on the Lab Code of that sample which written in blue color. Once clicked the system will display the screen in Fig. 4

1) To filter the displayed samples based on their status

2) To sort the displayed samples based on different reference codes

3) To remove sample from the list
3.a) Click the check box of the sample
3.b) Click on the upper button

4) To display the sample details

	Lab Code	CENT Code	Regs. Date	Equipment	Sample Point
<input type="checkbox"/>	18353	0002/0019/01	01-Dec-2004	NISSAN CIVILIAN BUS 2002	ENGINE SUMP
<input type="checkbox"/>	18392	0002/0010/01	11-Dec-2004	MERCEDEZ 2038	ENGINE SUMP
<input type="checkbox"/>	18461	0002/0019/01	19-Dec-2004	NISSAN CIVILIAN BUS 2002	ENGINE SUMP
<input type="checkbox"/>	18732	0002/0010/01	11-Jan-2005	MERCEDEZ 2038	ENGINE SUMP
<input type="checkbox"/>	20016	0002/0018/01	29-Mar-2005	MERCEDESE BENZ 2040 OF 2004	ENGINE SUMP

Fig. 3

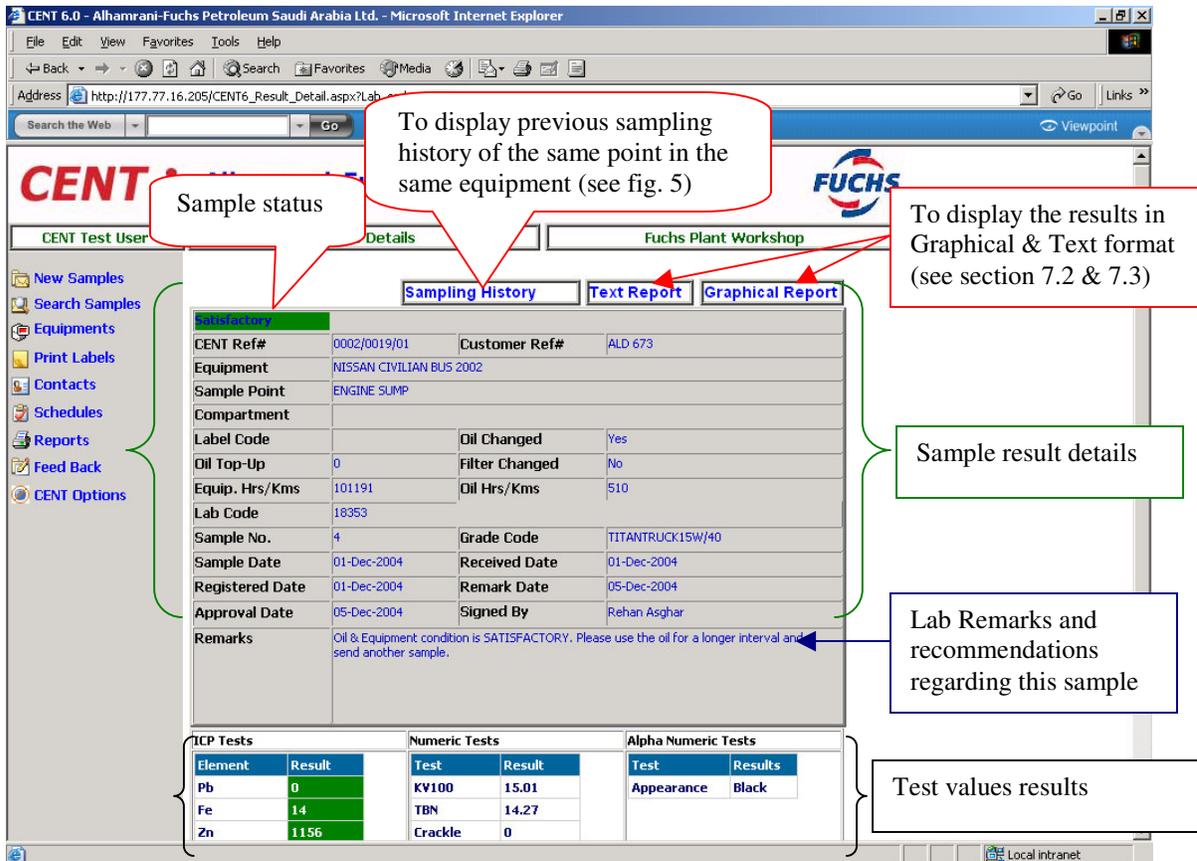


Fig 4

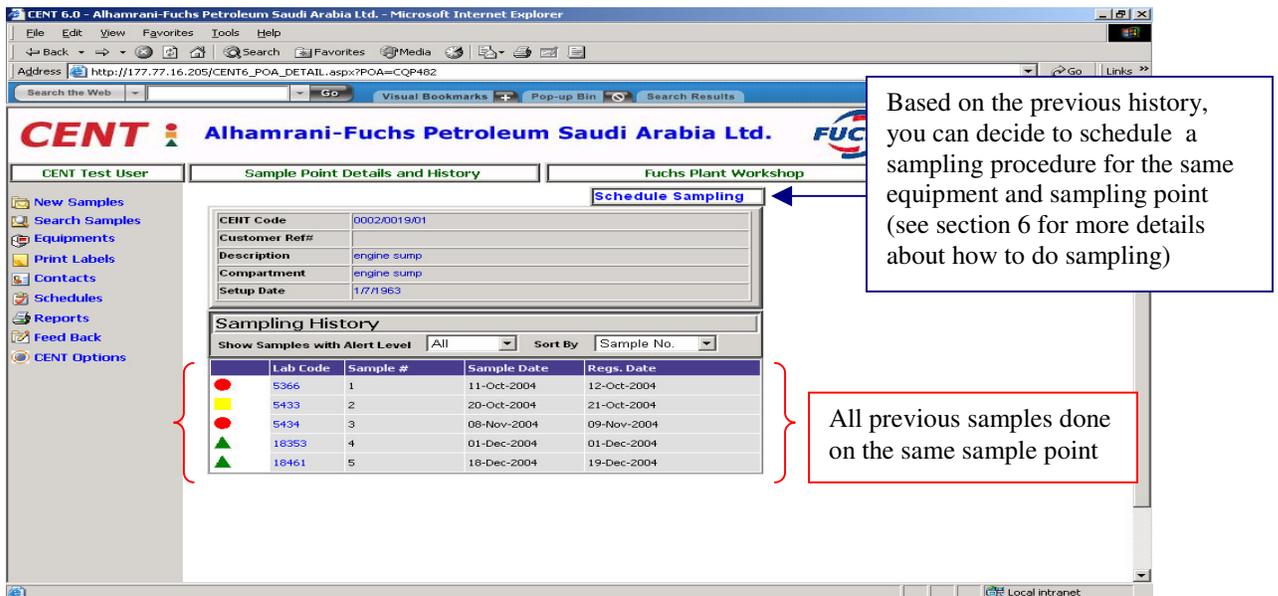


Fig. 5